

## 61-637 NCV Sensing Indications Table

NCV Indications	Ranges (V AC)				
Mode	18-25V	26-34V	35-45V	46-54V	55-600V
<b>Normal Mode (24-600V AC)</b>	Red Flashing Light in Tip and beeps @ 2Hz	Red Flashing Light in Tip and beeps from 2Hz to 4Hz	Red Flashing Light in Tip and beeps @ 4Hz	Red Flashing Light in Tip and beeps from 4Hz to 12 Hz	Red Flashing Light in Tip and beeps @ 12Hz
<b>Audible Notification Disabled (24-600V AC)</b>	Red Flashing Light in Tip @ 2Hz, No beeps	Red Flashing Light in Tip from 2Hz to 4Hz, No beeps	Red Flashing Light in Tip @ 4Hz, No beeps	Red Flashing Light in Tip from 4Hz to 12Hz, No beeps	Red Flashing Light in Tip @ 12Hz, No beeps

Note: Indications above may be subject to variability caused by humidity, insulation thickness, distance, and other factors.

## 61-627 NCV Sensing Indications Table

NCV Indications	Ranges (V AC)
<b>Mode</b>	<b>50-600V AC</b>
<b>Normal Mode (50-600V AC)</b>	Red Flashing Light in Tip and beeps @ 12Hz

Note: Indications above may be subject to variability caused by humidity, insulation thickness, distance, and other factors.

## Functions Operation Table

Indication	Response	Default Function	Operation
On Off	Meter On	GREEN LED	Push Button
Audible (61-637 Only)	Beeps	On	Push Button
Flashlight (61-637 Only)	Flashlight On	Off	Push Button